

#### INSTALLATION INSTRUCTIONS

(SEE HOMEOWNER MANUAL FOR OPERATING INSTRUCTIONS)

#### **INSTALLER:**

Leave this manual with the appliance.

CONSUMER:

Retain this manual for future reference.

#### **A** WARNING

#### FIRE OR EXPLOSION HAZARD

Failure to follow safety warnings exactly could result in serious injury, death, or property damage.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- WHAT TO DO IF YOU SMELL GAS
  - Do not try to light any appliance.
  - Do not touch any electrical switch; do not use any phone in your building.
  - · Leave the building immediately.
  - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
  - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

#### LOG SET MODEL LS(36,40)DINF

For Use With DVCT(36,40) Fireplaces





**NOTICE:** Ceramic logs may differ in appearance from those shown in this manual.

#### **A** WARNING

If not installed, operated and maintained in accordance with the manufacturer's instructions, this product could expose you to substances in fuel or from fuel combustion which can cause death or serious illness.



We suggest that our gas hearth products be installed and serviced by professionals who are certified in the U.S. by the National Fireplace Institute® (NFI) as NFI Gas Specialists.

## LOG IDENTIFICATION

| DVCT36<br>PART# | DVCT40<br>PART# | FRONT         | ТОР           |
|-----------------|-----------------|---------------|---------------|
| 38835           | 38876           | Ember Bed (A) | Ember Bed (A) |
| 38836           | 38877           | Log (B)       | Log (B)       |
| 38837           | 38878           | Ember Bed (C) | Ember Bed (C) |
| 38838           | 38879           | Ember Bed (D) | Ember Bed (D) |
| 38839           | 38880           | Log (E)       | Log (E)       |
| 38840           | 38881           | Log (F)       | Log (F)       |
| 38841           | 38882           | Log (G)       | Log (G)       |

USE ONLY MANUFACTURER'S REPLACEMENT PARTS. USE OF ANY OTHER PARTS COULD CAUSE INJURY OR DEATH.

Attention: When ordering parts, it is very important that part number and description of part coincide.

Page 2 38810-0-0118

## LOG IDENTIFICATION

| DVCT36<br>PART# | DVCT40<br>PART# | FRONT   | ТОР     |
|-----------------|-----------------|---------|---------|
| 38842           | 38883           | Log (H) | Log (H) |
| 38843           | 38884           |         |         |
|                 |                 | Log (I) | Log (I) |
| 38844           | 38885           |         |         |
|                 |                 | Log (J) | Log (J) |
| 38845           | 38886           | Log (K) | Log (K) |
| 38846           | 38887           | Log (L) | Log (L) |
| 38847           | 38888           | Log (M) | Log (M) |
| 38848           | 38889           | Log (N) | Log (N) |

USE ONLY MANUFACTURER'S REPLACEMENT PARTS. USE OF ANY OTHER PARTS COULD CAUSE INJURY OR DEATH.

Attention: When ordering parts, it is very important that part number and description of part coincide.

## LOG IDENTIFICATION

| DVCT36<br>PART# | DVCT40<br>PART# | FRONT   | ТОР     |
|-----------------|-----------------|---------|---------|
| 38849           | 38890           | Log (O) | Log (O) |
| 38850           | 38891           | Log (P) | Log (P) |
| 38851           | 38892           | Log (Q) | Log (Q) |
| 38852           | 38893           | Log (R) | Log (R) |
| 38853           | 38894           | Log (S) | Log (S) |
| 36747           | Coals<br>(100)  |         |         |

USE ONLY MANUFACTURER'S REPLACEMENT PARTS. USE OF ANY OTHER PARTS COULD CAUSE INJURY OR DEATH.

Attention: When ordering parts, it is very important that part number and description of part coincide.

Page 4 38810-0-0118

#### **LOG AND EMBER PLACEMENT**

NOTE: Install liners before logs. See separate Liner Installation manual for details.

#### **A** CAUTION

Do not handle these logs with your bare hands. Always wear gloves to prevent skin irritation from ceramic fibers. After handling the logs, wash your hands gently with soap and water to remove any trace of fibers.

#### Accessing the Interior of the Fireplace

See Homeowners Manual for instruction on how to remove the barrier screen and glass door.

#### Log Set Installation

The positioning of the logs is critical to the safe and clean operation of this fireplace. Sooting and other problems may result if the logs are not properly and firmly positioned in the fireplace. Please refer to (Figure 1) and the following WARNING when completing log placement instructions. For step by step log placement instructions, (See Pages 6 - 27).

#### **MARNING**

Failure to position the parts in accordance with this diagram or failure to use only parts specifically approved with this fireplace may result in property damage or personal injury.

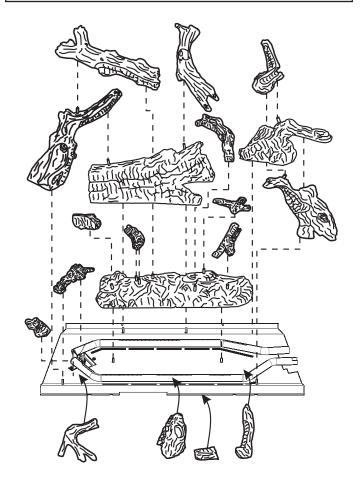


Figure 1

#### **Burner Pin Location**

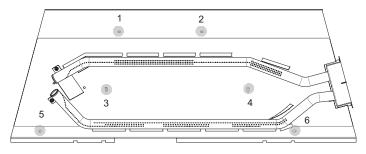


Figure 2

#### **Glowing Embers Information**

- . Carefully separate the ember material into small amounts (no larger than "dime-size" pieces).
  - a. Fluffed up pieces of ember material one layer thick will produce the best ember glow. Do not place more than one layer of ember material onto the burner. Excess ember material will decrease the ember glow effect.
  - Save any remaining ember material for future applications (as needed).

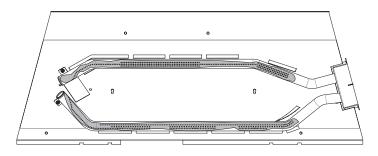


Figure 3


### LOG AND EMBER PLACEMENT

1. Place the large charred Ember Bed A onto burner base pins 3 and 4, located between the front and rear burner tubes.




Page 6 38810-0-0118

2. Place Log B on the left rear of the burner base. Align with the angle of the burner tube.

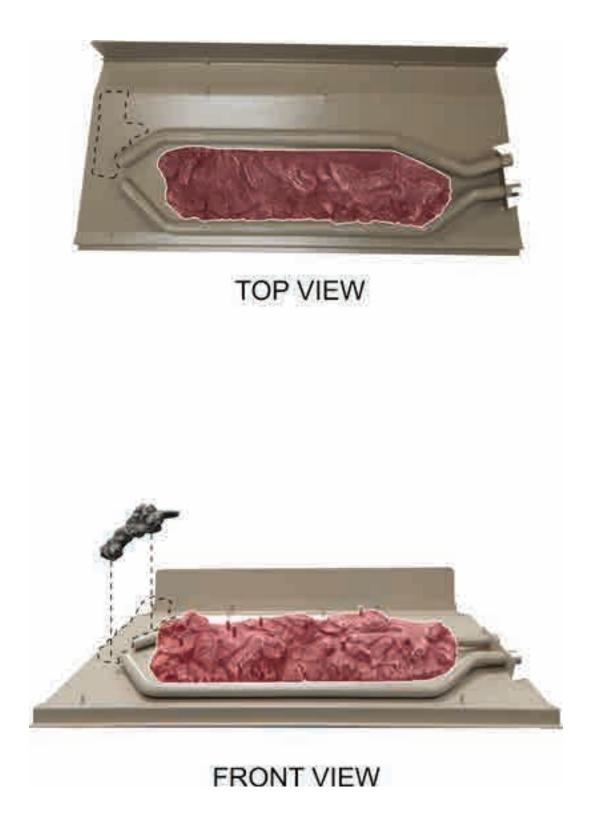


3. Place Ember Bed C on the left front of the burner base. Align with the angle of the burner tube and Log B.

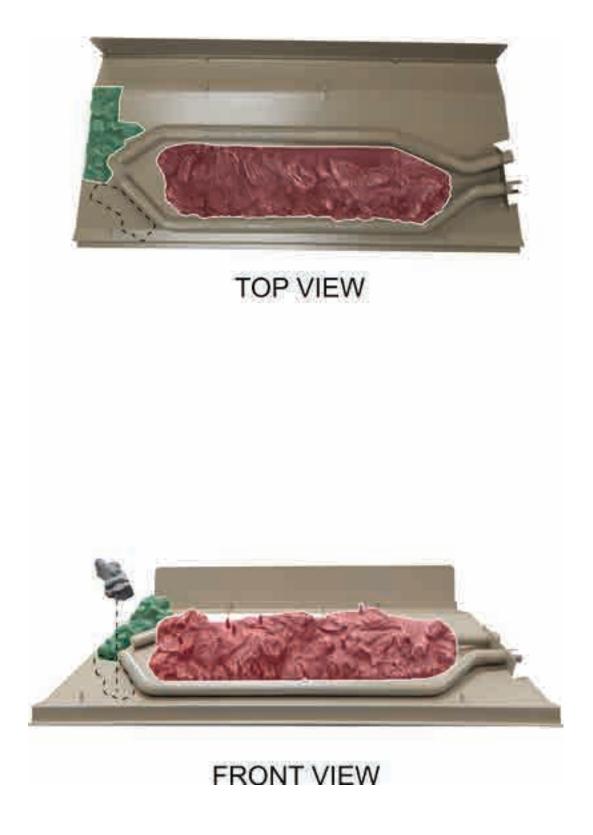


Page 8 38799-0-0118

4. Place Ember Bed D onto Ember Bed A pin 8, located on far right.

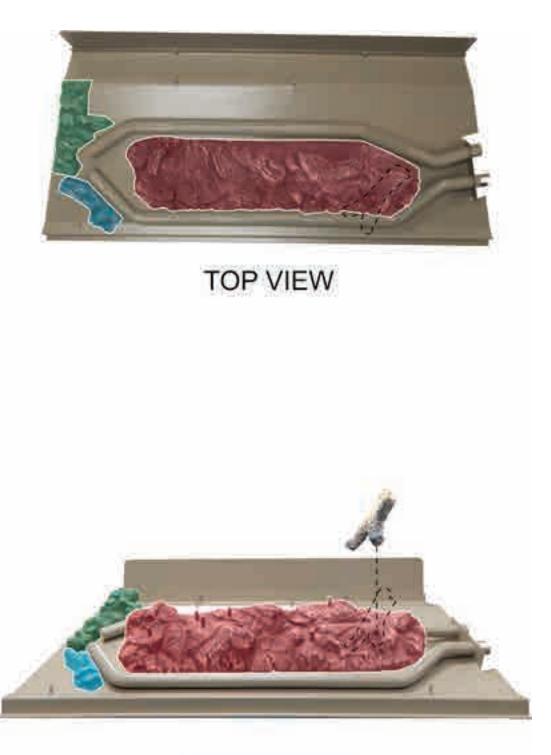


FRONT VIEW

5. Place Log E onto burner base pin 6, located on far right.

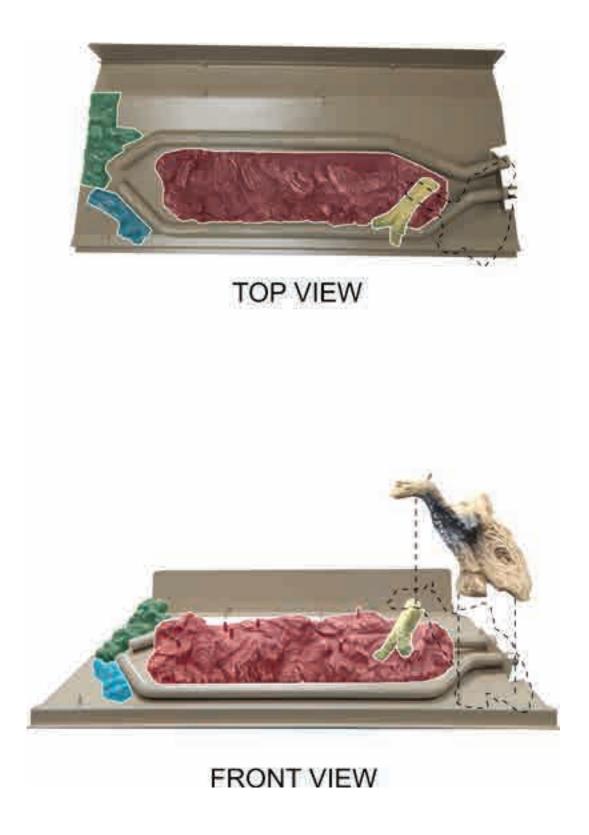


Page 10 38810-0-0118

6. Place Log F on the right rear of the burner base. Align with the angle of the burner tube.

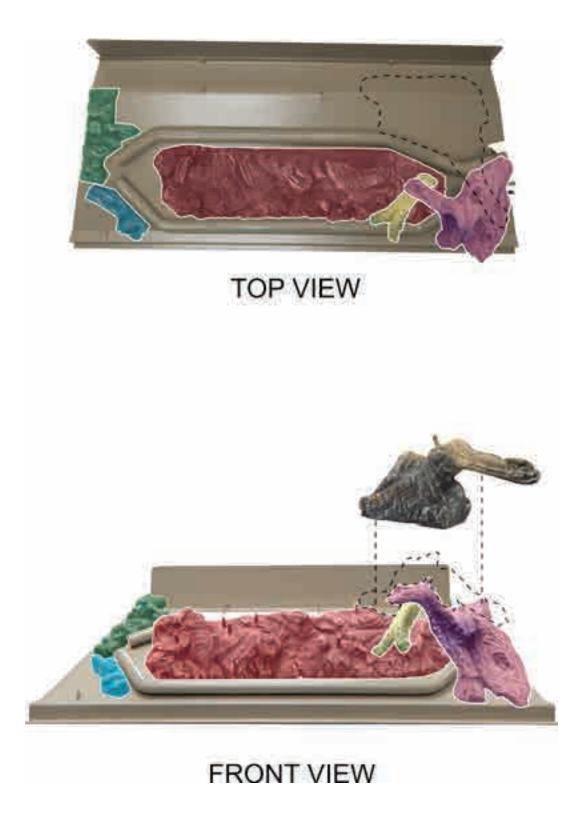

7. Place Log G onto burner base pins 1 and 2, located behind the rear burner tube.

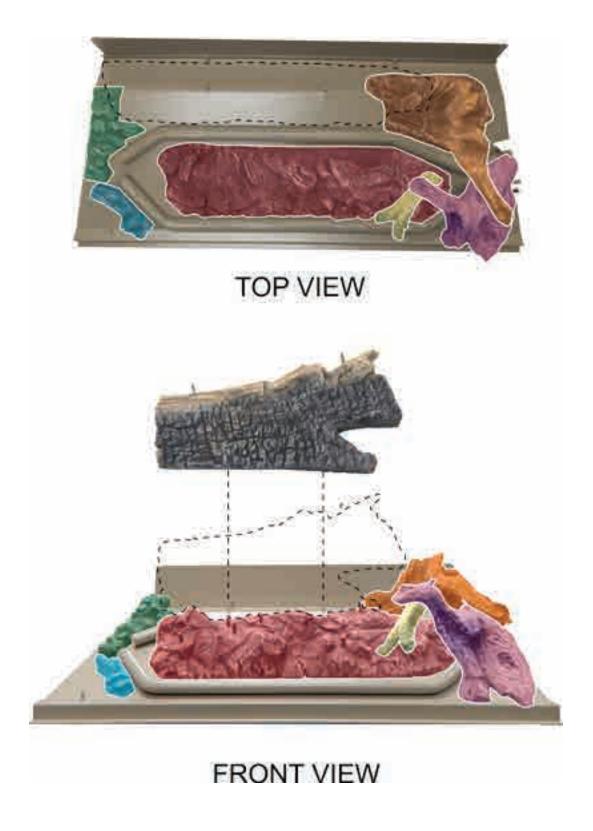


Page 12 38810-0-0118

8. Place decorative rocks across burner base in front of the burner tube. Do not cover the burner tube ports.




9. Place the glowing embers on the burner tubes covering all ports as shown. You may add additional embers on Ember Bed for extra glow. You may press some embers onto the front side of Log G to help create glow when the fire is burning.

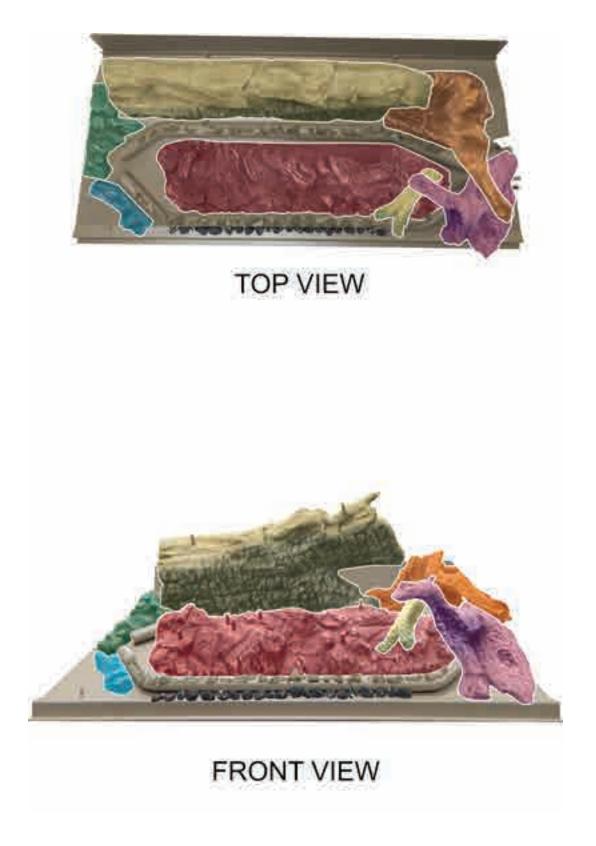

Page 14 38810-0-0118

10. Place Log H onto Ember Bed A pin 6, located on center right.

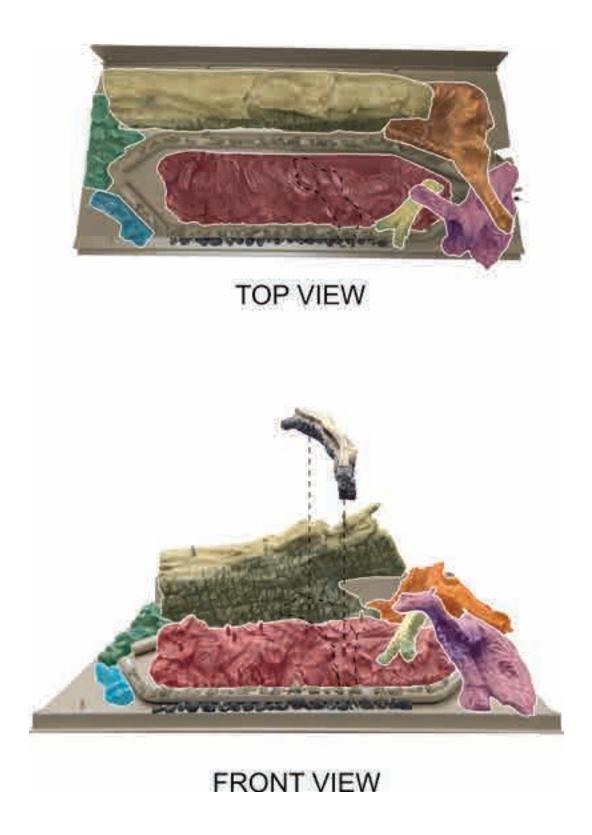


11. Place Log I onto Ember Bed A pins 2 and 3, located on left.




Page 16 38810-0-0118

12. Place Log J onto the front left pin 5 on the burner base and onto the pin on Log G.

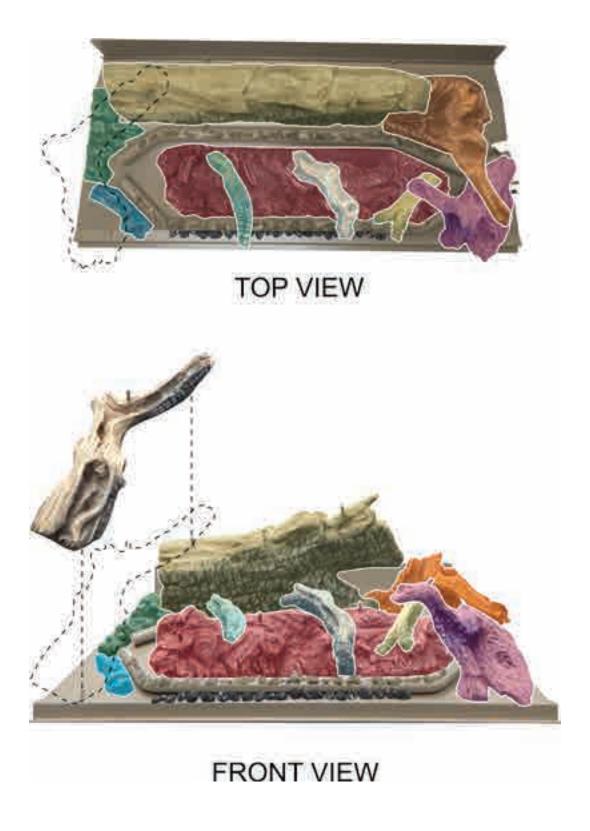


13. Place Log K onto the pin on Log J and onto the pin 4 on Ember Bed A, located on center left.

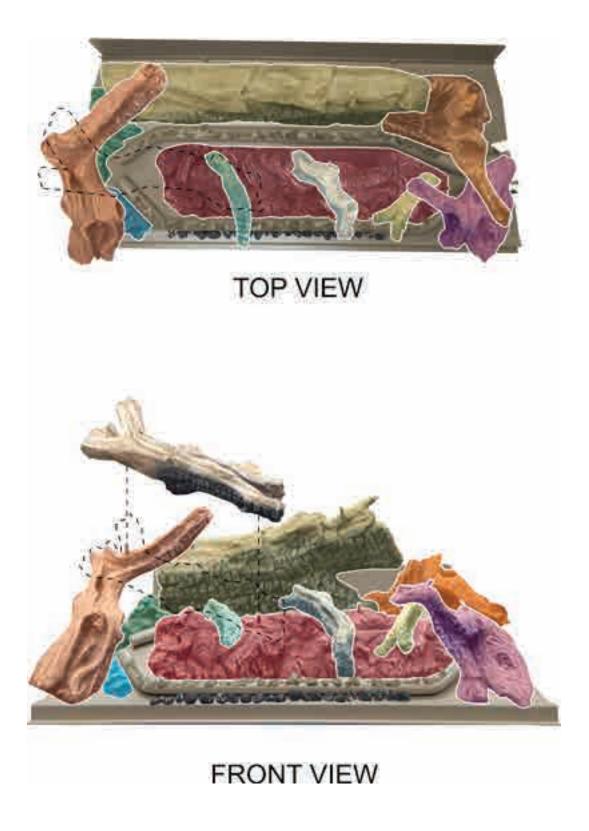


Page 18 38810-0-0118

14. Place Log L onto the pin on Log E and onto the pin on Log F.

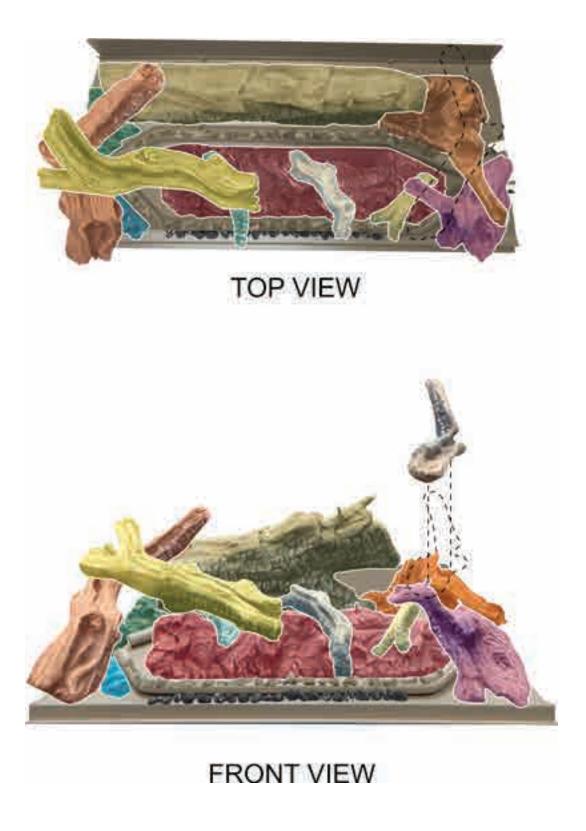


15. Place Log M into gap of Logs F and G and onto the pin 7 on Ember Bed A, located on top right.

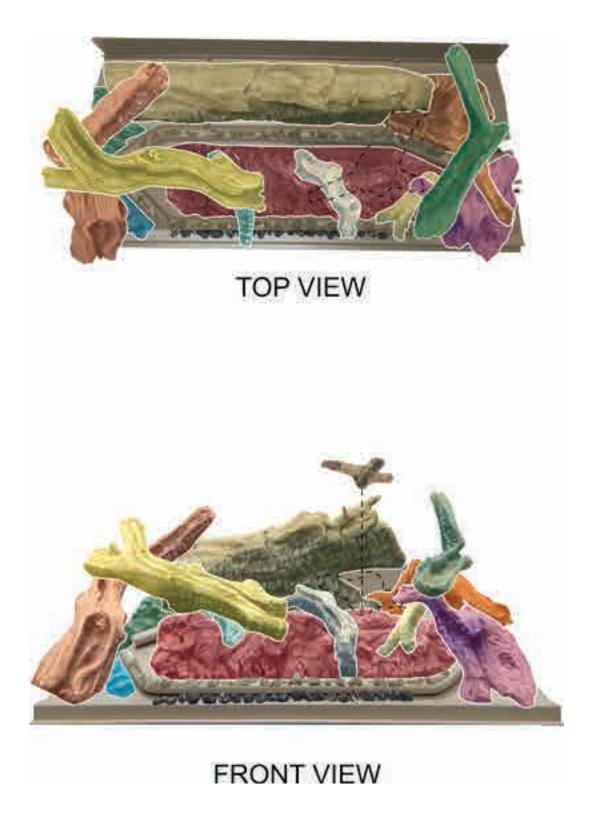


Page 20 38810-0-0118

16. Place Log N onto the pin on Log G and onto the pin on Log M.

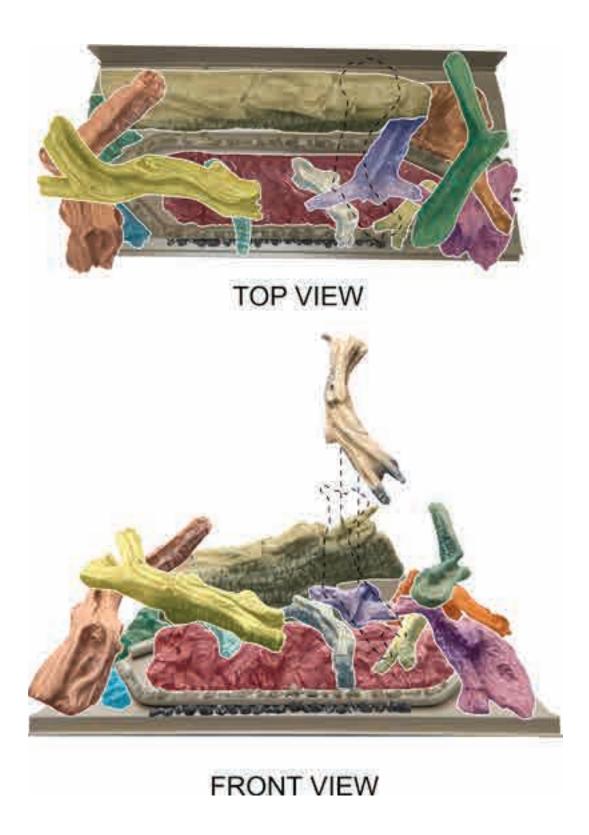

17. Place Log O onto Ember Bed A pin 1, located on far left.

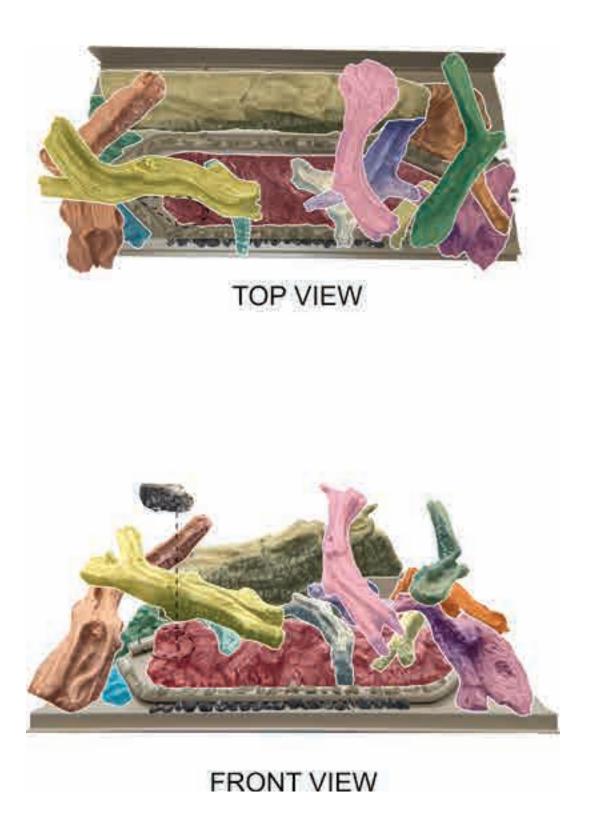


Page 22 38810-0-0118

18. Place Log P onto Ember Bed A pin 5, located on center right.




19. Place Log Q over the front burner tube and on Ember Bed A. (There are no locator pins for the final three logs, so pay special attention to their proper location).

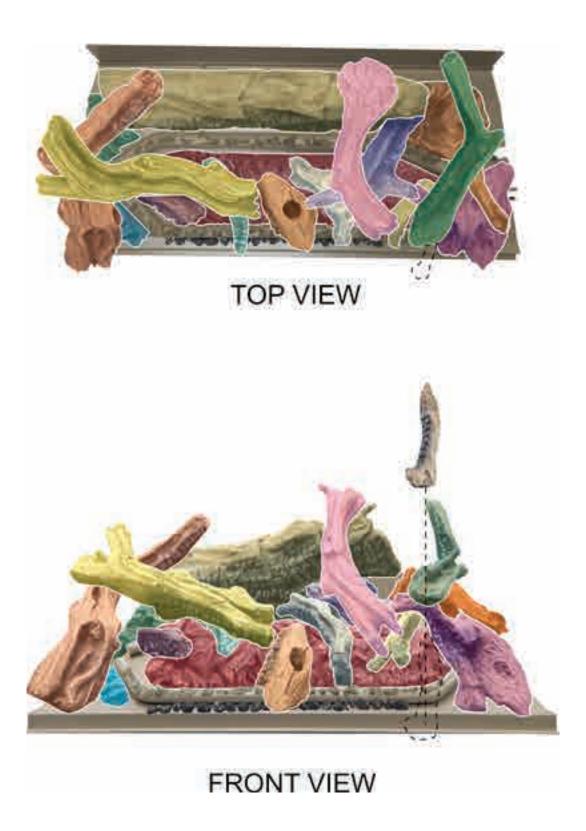


Page 24 38810-0-0118

20. Place Log R on the floor liner in front of the burner tube and between Logs P and Q. (There are no locator pins for the final three logs, so pay special attention to their proper location).

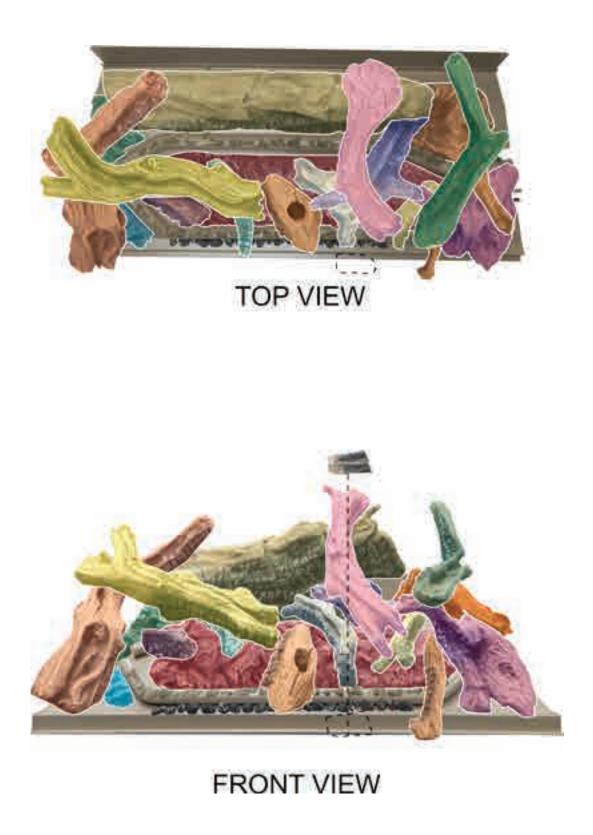


21. Place Log S on the left front of the burner base and onto Log O. (There are no locator pins for the final three logs, so pay special attention to their proper location).

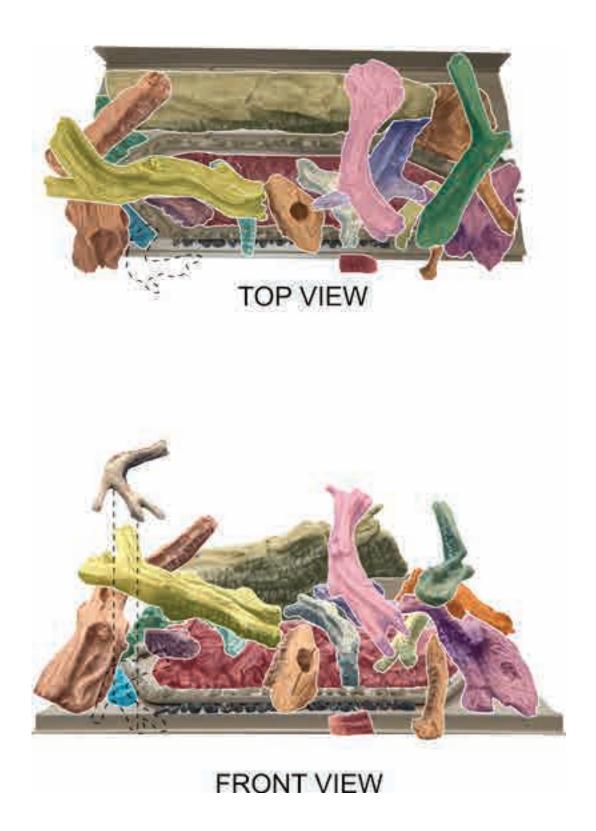

Page 26 38810-0-0118

22. Place additional decorative rocks and embers in any empty areas around the burner as desired. DO NOT cover burner ports. The log set is complete.

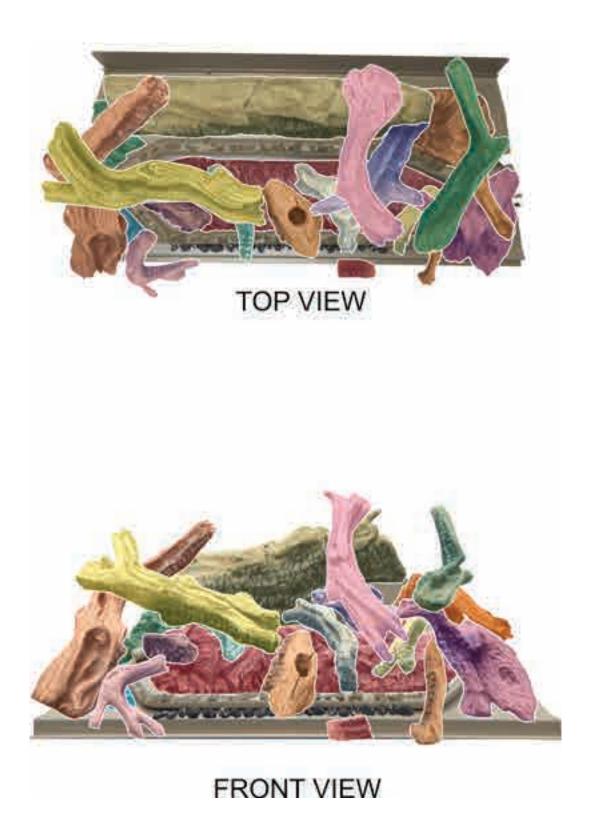

#### **MASTER PARTS DISTRIBUTOR LIST**

To Order Parts Under Warranty, please contact your local Empire dealer. See the dealer locator at www.empirecomfort. com. To provide warranty service, your dealer will need your name and address, purchase date and serial number, and the nature of the problem with the unit.

To Order Parts After the Warranty Period, please contact your dealer or one of the Master Parts Distributors listed below. This list changes from time to time. For the current list, please click on the Master Parts button at www.empirecomfort.com.

Please note: Master Parts Distributors are independent businesses that stock the most commonly ordered Original Equipment repair parts for Heaters, Grills, and Fireplaces manufactured by Empire Comfort Systems Inc.

#### **Dey Distributing**

1401 Willow Lake Boulevard Vadnais Heights, MN 55101

**Phone:** 651-490-9191 **Toll Free:** 800-397-1339

Website: www.deydistributing.com Parts: Heater, Hearth and Grills

#### F. W. Webb Company

200 Locust Street Hartford, CT 06114

Phone: 860-722-2433 Toll Free: 800-243-9360 Fax: 860-293-0479

Toll Free Fax: 800-274-2004

Websites: www.fwwebb.com & www.victormfg.com

Parts: Heater, Hearth and Grills

#### **East Coast Energy Products**

10 East Route 36 West Long Branch, NJ 07764

Phone: 732-870-8809 Toll Free: 800-755-8809 Fax: 732-870-8811

Website: www.eastcoastenergy.com Parts: Heater, Hearth and Grills

#### **HOW TO ORDER REPAIR PARTS**

#### **Parts Not Under Warranty**

Parts can be ordered through your Service Person, Dealer, or a Master Parts Distributor. See this page for the Master Parts Distributors list. For best results, the **service person or dealer** should order parts through the distributor. Parts can be shipped directly to the **service person/dealer**.

#### **Warranty Parts**

Warranty parts will need a proof of purchase and can be ordered by your Service Person or Dealer. Proof of purchase is **required** for warranty parts.

All parts listed in the Parts List have a Part Number. When ordering parts, first obtain the Model Number and Serial Number from the name plate on your equipment. Then determine the Part Number (**not** the Index Number) and the Description of each part from the following illustration and part list. Be sure to give all this information . . .

| Appliance Model Number  | Part Description |  |  |  |
|---|------------------|--|--|--|
| A difference On the National Action   | D. (N. obs)      |  |  |  |
| Appliance Serial Number   | Part Number      |  |  |  |
| Type of Gas (Propane or Natural)  |                  |  |  |  |
| Do not order bolts, screws, washers or nuts. They are standard hardware items and can be purchased at any local hardware store. |                  |  |  |  |
| Shipments contingent upon strikes, fires and all causes beyond our control.   |                  |  |  |  |

Page 28 38810-0-0118

# **APPLIANCE SERVICE HISTORY** Date **Dealer Name Service Technician Name Service Performed/Notes**

# **APPLIANCE SERVICE HISTORY** Date **Dealer Name Service Technician Name Service Performed/Notes**

Page 30 38810-0-0118

# **APPLIANCE SERVICE HISTORY** Date **Dealer Name Service Technician Name Service Performed/Notes**



## Empire Comfort Systems Inc. Belleville, IL

If you have a general question about our products, please e-mail us at info@empirecomfort.com.

If you have a service or repair question, please contact your dealer.

**SINCE 1932** 

#### www.empirecomfort.com

Page 32 38810-0-0118