

DVCT(36,40) LINER KIT INSTALLATION INSTRUCTIONS

CERAMIC FIBER LINERS		
MODEL 36	MODEL 40	DESCRIPTION
DVP36CPMB-1	DVP40PMB-1	Cottage Brick
DVP36CPTS-1	DVP40PTS-1	Traditional Stone

LEAVE INSTRUCTIONS WITH THE HOMEOWNER.

CARTON CONTENTS	
Description	Ceramic Fiber Liners
LINER REAR	1
LINER SIDE - LEFT	1
LINER SIDE - RIGHT	1
LEFT FLOOR	1
RIGHT FLOOR	1
LINER BRACKET	1
#10 x 1/2 Screw	3
LINER TOP ASSEMBLY	1

Tools needed: Phillips screw driver

Installation of Floors

1. Remove barrier screen and glass door.
(See the owner's manual for instructions)
2. Place the RIGHT and LEFT FLOOR as
(Shown In Figure 1).

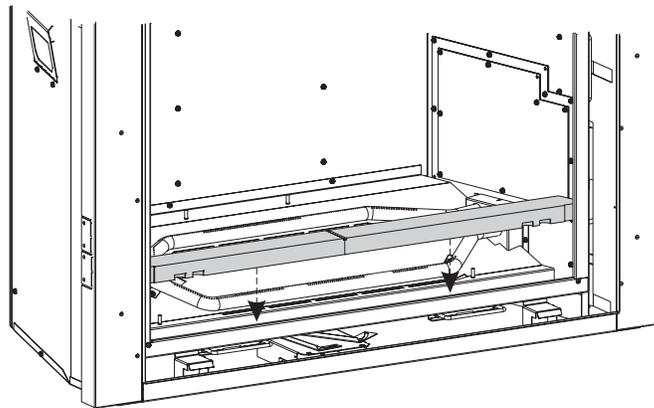


Figure 1
Left and Right Floor

NOTE: Video of liner installation available on our website at:
www.empirecomfort.com.

QR Code



Installation of Liner

1. Place LINER REAR on the back of the firebox and hold with one hand. (See Figure 2)

NOTE: (For Fiber Brick Liner Kit Only) Protruding bricks are installed towards the top.

NOTE: (For Fiber Rock Liner Kit Only) Thicker rocks are installed towards the top.

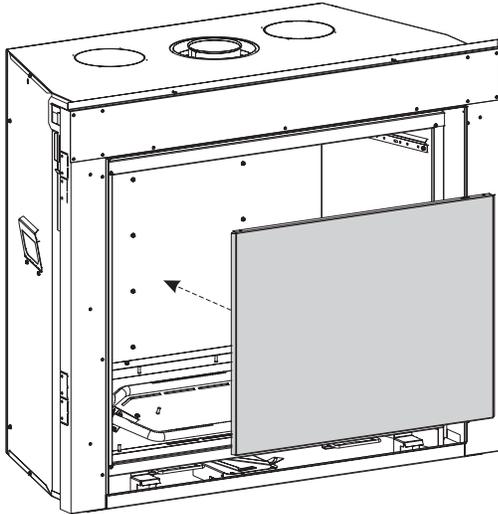


Figure 2

2. Place LINER SIDE- RIGHT against right firebox wall and LINER REAR and push back to hold into place. Repeat for LINER SIDE - LEFT. (See Figure 3)

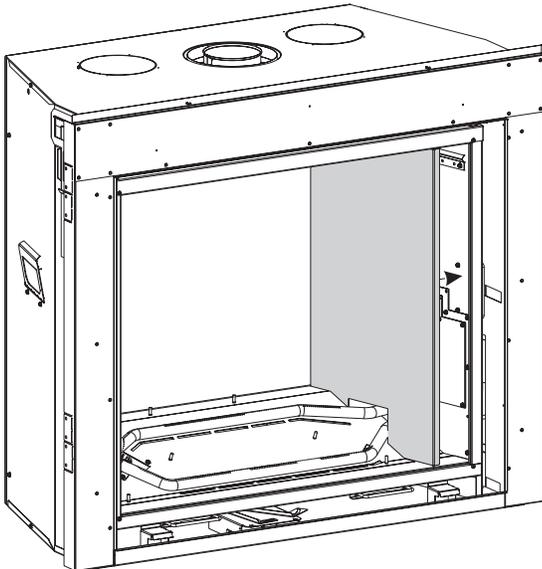


Figure 3

3. Place the LINER TOP ASSEMBLY so that it rests on the LINER REAR and secure with LINER BRACKET and (3) screws. (See figure 4)

NOTE: Ensure (painted side) faces down, (black side) should face up.



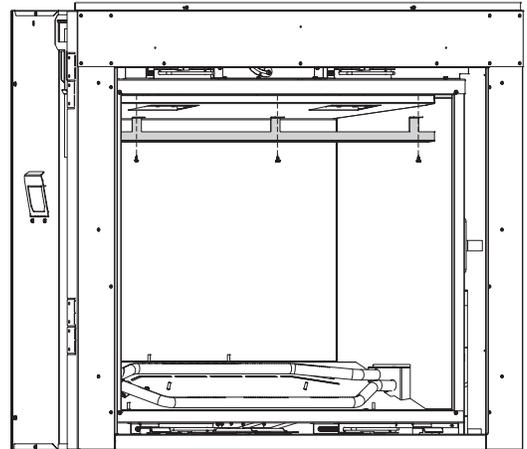


Figure 4

CERAMIC FIBER LINER KIT EXPLODED VIEW AND PARTS LIST

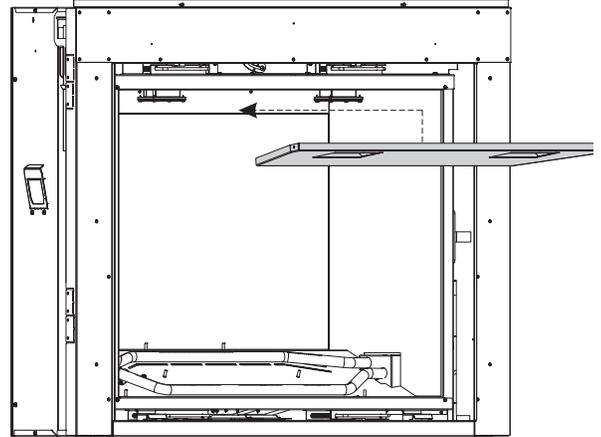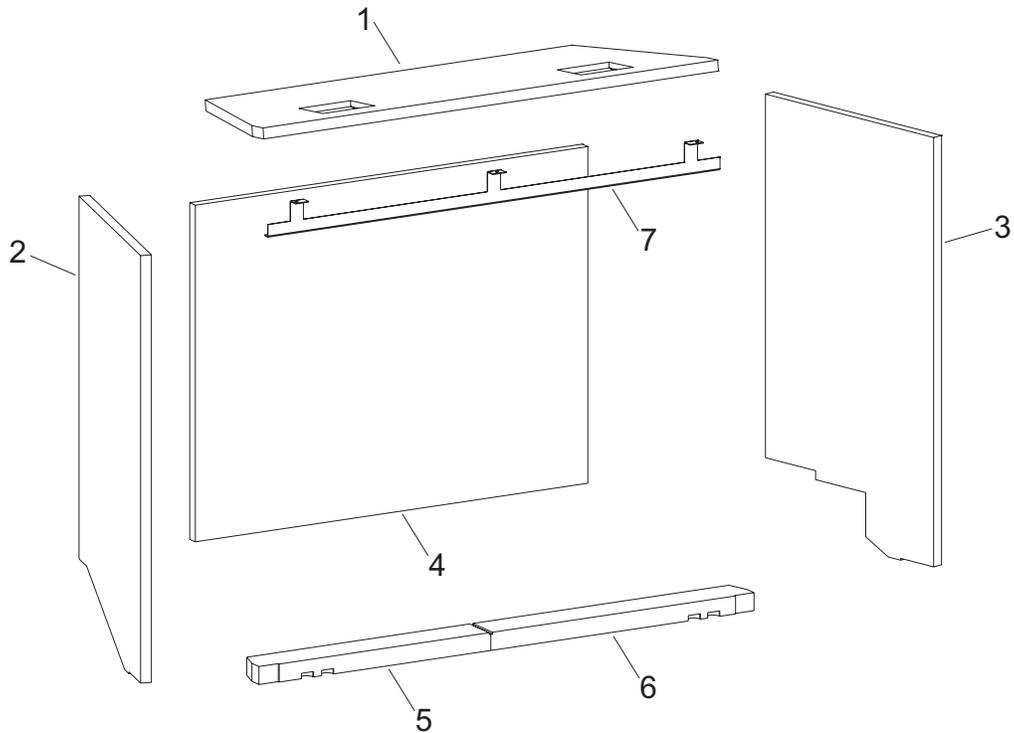

INDEX NO.	PART NUMBERS		DESCRIPTION	QTY SUPPLIED
	DVP36CPMB	DVP36CPTS		
1	37309	37309	LINER TOP	1
2	37319	37315	LINER SIDE - LEFT	1
3	37320	37316	LINER SIDE - RIGHT	1
4	31317	37314	LINER REAR	1
5	37322	37313	LINER FLOOR - LEFT	1
6	37321	37312	LINER FLOOR - RIGHT	1
7	37221	37221	LINER BRACKET	1

INDEX NO.	PART NUMBER		DESCRIPTION	QTY SUPPLIED
	DVP40PMB	DVP40PTS		
1	34771	34771	LINER TOP	1
2	36252	36246	LINER SIDE - LEFT	1
3	36253	36247	LINER SIDE - RIGHT	1
4	36250	36245	LINER REAR	1
5	36255	34798	LINER FLOOR - LEFT	1
6	36254	34774	LINER FLOOR - RIGHT	1
7	34767	34767	LINER BRACKET	1
NOT SHOWN	R2737	R2737	HEX HEAD #10x1/2 SCREW	3



**Empire Comfort Systems Inc.
Belleville, IL**

If you have a general question
about our products, please e-mail
us at info@empirecomfort.com.

If you have a service or repair
question, please contact your dealer.

SINCE 1932

www.empirecomfort.com