

# Boulevard

VENT-FREE LINEAR FIREPLACES

## Reflective Liner Kits for Use on VFLL60FP90L(N,P)-1

**VBP60LSS-1** (Stainless Steel)  
**VBP60LKR-1** (Black Reflective)

## Reflective Liner Kits for Use on VFLL72FP90L(N,P)-1

**VBP72LSS-1** (Stainless Steel)  
**VBP72LKR-1** (Black Reflective)

INSTRUCTIONS MUST BE LEFT WITH THE OWNER AFTER INSTALLATION.

1. If applicable, remove glass front from fireplace by lifting the glass front up, sliding it to the right, and then carefully angle left side out of the slots. See Figure 1.

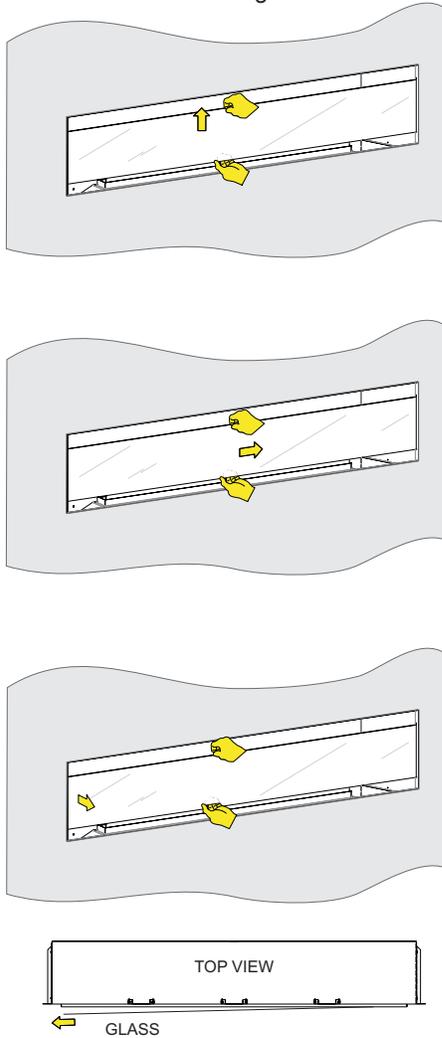


Figure 1

2. Remove the burner glass support screens by lifting them up and out..


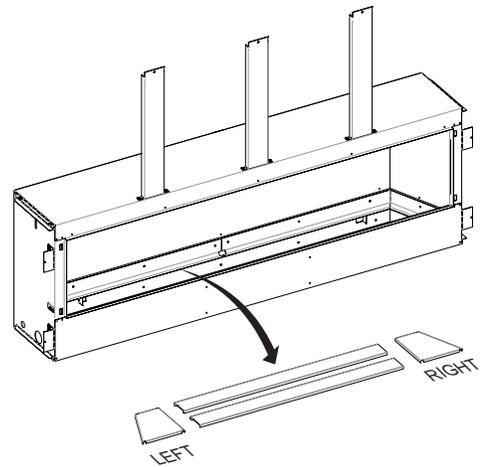



Figure 2

3. Remove the inner firebox top by removing five Phillips Truss Head Screws. **See Figure 3.**

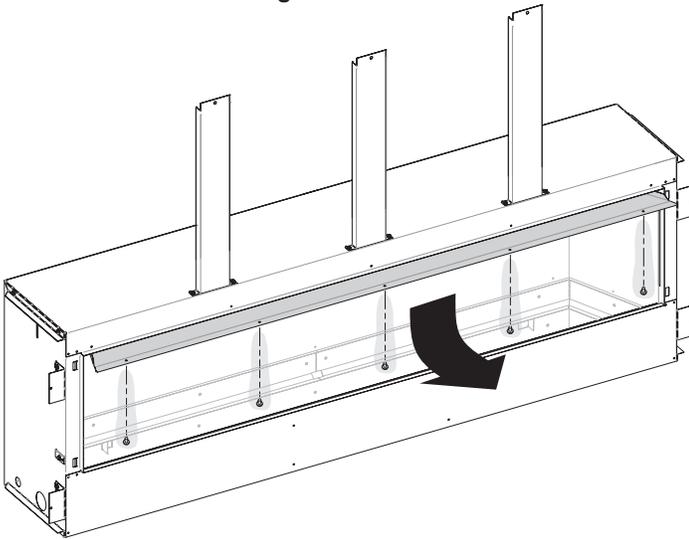

**Figure 3**


4. Place the back liner into the firebox. The liner will rest on the rear LED reflector. \*For Stainless liners, secure with 5 #8 x 3/8 Phillips screws. **See Figure 4.**

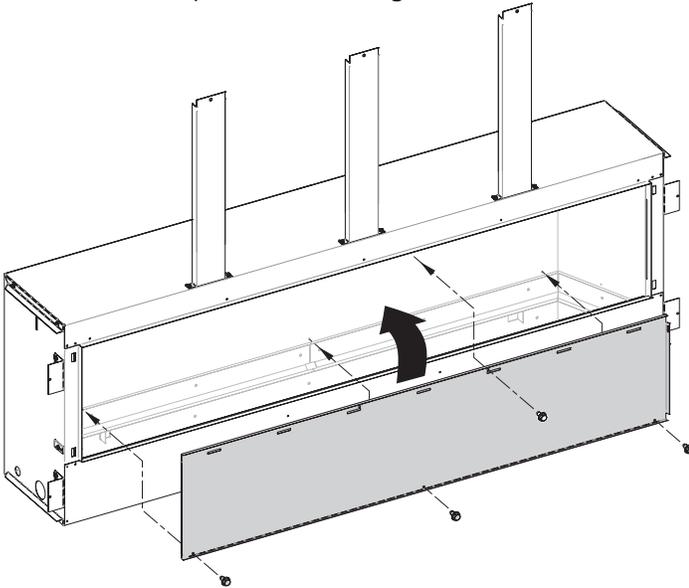

**Figure 4**

\*Stainless liner shown


5. Place the left liner on the left side of the firebox. Angle liner up into place and allow bottom to rest on the left LED reflector. \*For stainless liners, secure the liner with one 8 x 1/2 Phillips screw. **See Figure 5.**
6. Place the right liner on the right side of the firebox. Angle liner up into place and allow bottom to rest on the right LED reflector. \*For stainless liners, secure the liner with one 8 x 1/2 Phillips screw. **See Figure 5.**

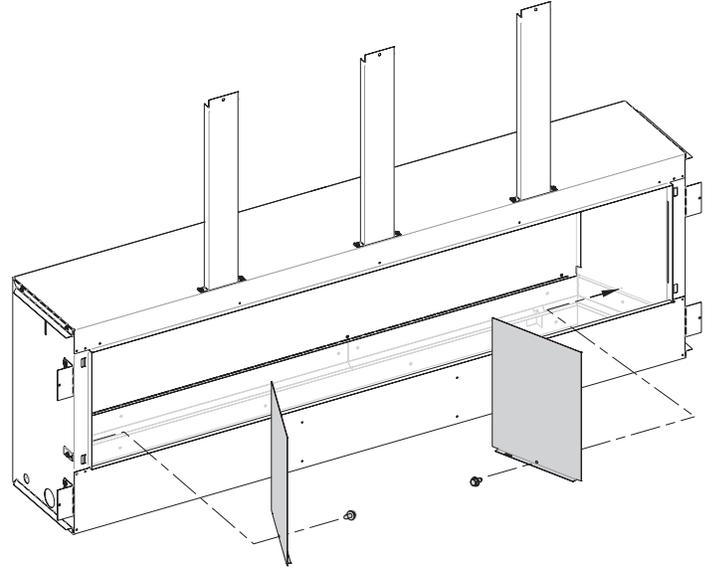

**Figure 5**

\*Stainless liner shown


7. Secure the liners in place by replacing the inner firebox top and five screws removed in Step 3. **See Figure 6.**

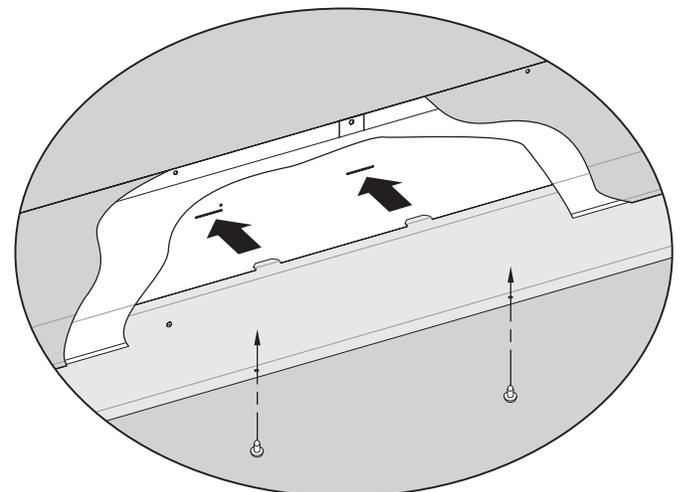

**Figure 6**

8. Replace the glass support screens removed in step 2. See **Figure 7**.


**Note:** Verify short glass panel is in place and level.

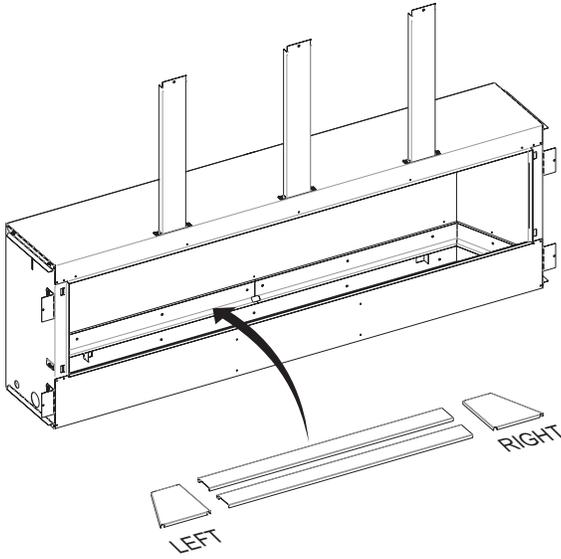


**Figure 7**

9. Install crushed glass media. Refer to the installation instructions provided with the fireplace.

10. Replace the glass front into the fireplace by placing the right side into the slots in the firebox. Carefully angle in the left side of the glass and then slide the glass to the left. Settle the glass into the slots by gently lowering it. See **Figure 8**.

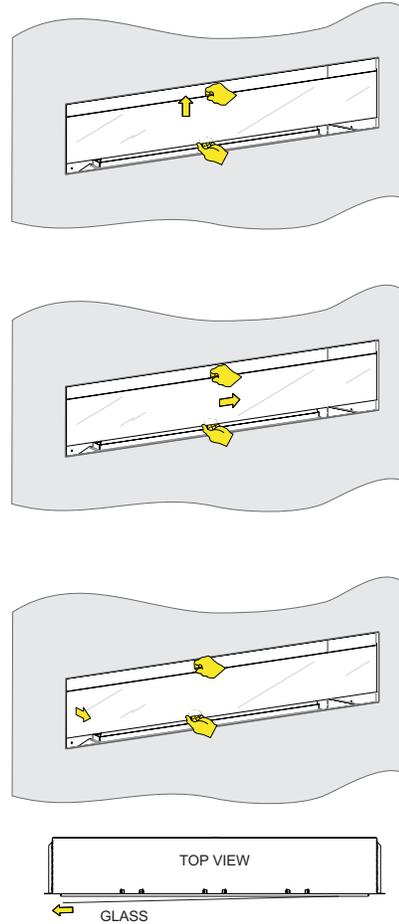

**Figure 8**

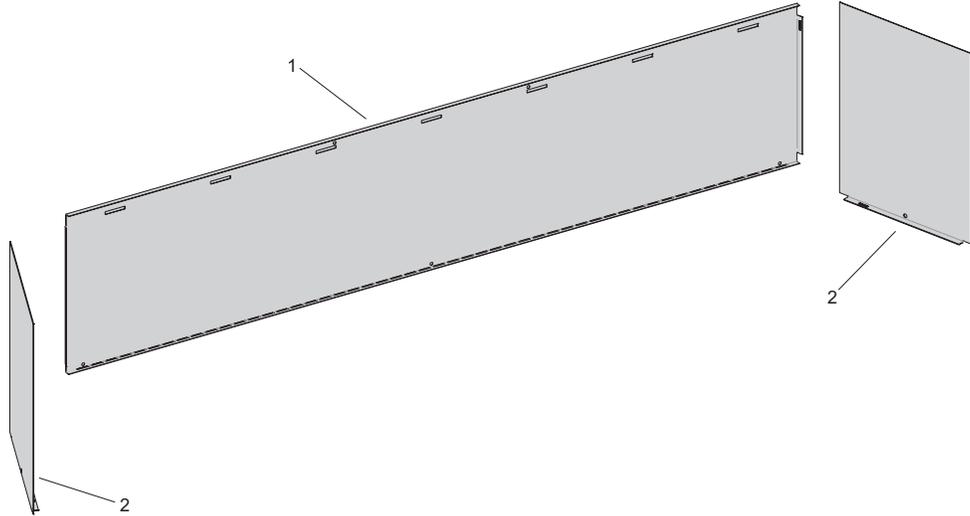

Index No.	Part No.				Description
	VBP60LKR	VBP72LKR	VBP60LSS	VBP72LSS	
1	R12314	R12315	37685	32685	Liner - Rear
2	R12313	R12313	32686	32686	Liner - Side (2 Required)
Not Shown	N/A	N/A	R3580	R3580	#8 x 1/2 Screw



Empire Comfort Systems Inc.  
 Belleville, IL

If you have a general question about our products, please e-mail us at [info@empirecomfort.com](mailto:info@empirecomfort.com).  
 If you have a service or repair question, please contact your dealer.

[www.empirecomfort.com](http://www.empirecomfort.com)