

UNPACKING THE FIREPLACE

1. Remove the four screws securing the plywood top to the corner supports. Remove the plywood top and discard.
2. Remove the two screws securing each corner support to the pallet. Remove the corner supports and discard.
3. Cut and the banding securing the fireplace to the pallet. Discard the banding.

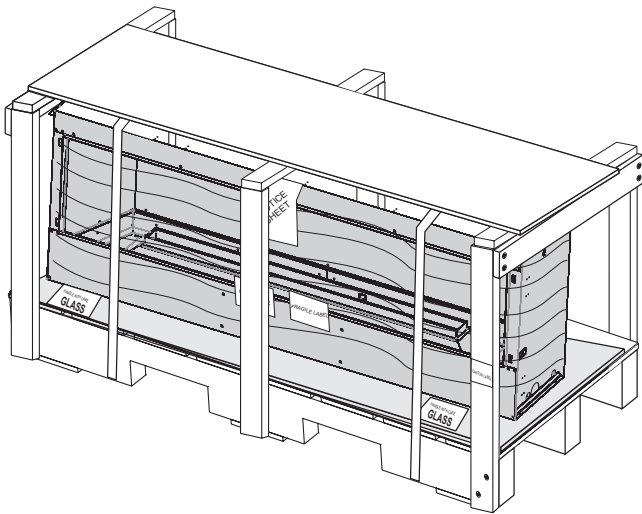


Figure 1

4. Remove the plastic wrap securing the instruction packet to the end of the fireplace. Discard the plastic wrap and keep the instruction packet.
5. Remove the plastic wrap securing the hardware box to the fireplace. Discard the plastic wrap and set aside the hardware box.

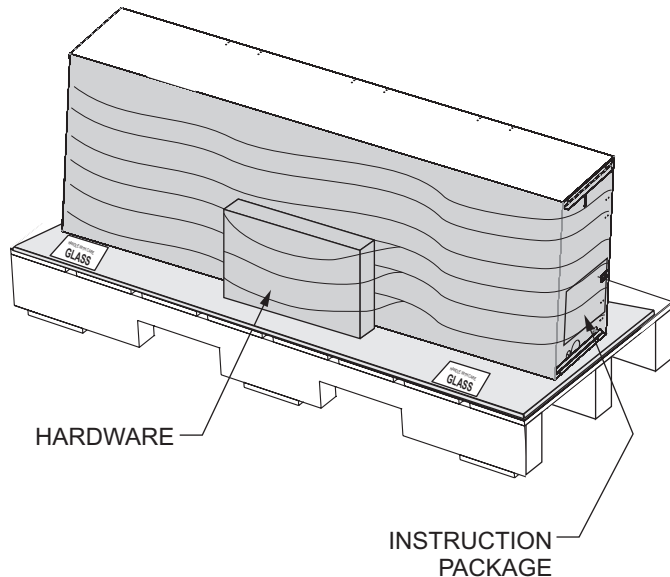


Figure 2

6. Carefully remove the bundle from inside the fireplace. This bundle contains two center glass supports and the burner deflector glass. Put the bundle in an out of the way place to avoid damaging the components.
7. Lift the fireplace off the pallet and place it near the installation site. If the fireplace must be placed on end so that a hand truck may be used for transportation, remove all loose components from inside the fireplace. Truck from the left end (when facing the fireplace opening) only.
8. Carefully open the cardboard bundle remaining on the pallet. This bundle contains the large non-combustible board and the front glass barrier. Put the components in an out of the way place to avoid damaging them.

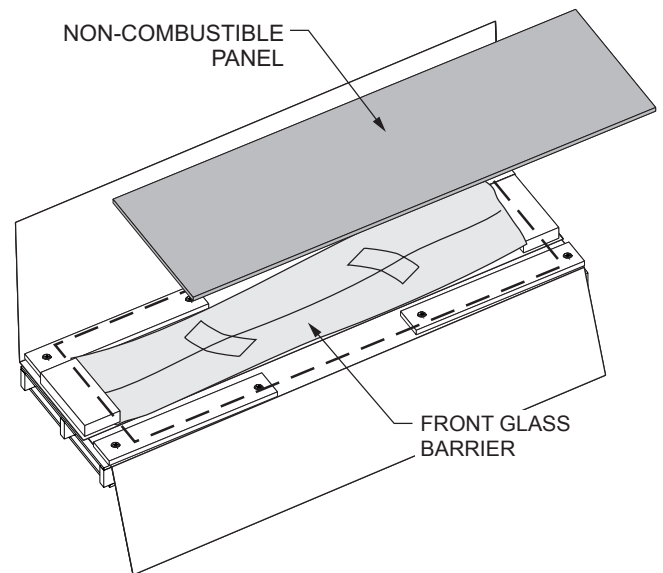


Figure 3

NOTICE: Non-combustible board is required for installation above the fireplace as specified in the installation instructions.