



AMERICAN HEARTH

INSTALLATION INSTRUCTIONS DVCT30 AND DVCT35 LINER KITS



CERAMIC FIBER LINERS		
DVCT30	DVCT35	Description
DVP30CPTB-1	DVP35CPTB-1	Cottage Brick
DVP30CPTS-1	DVP35CPTS-1	Traditional Stone

LEAVE INSTRUCTIONS WITH THE HOMEOWNER.

CARTON CONTENTS	
Description	Ceramic Fiber Liners
Rear Liner	1
Left Liner	1
Right Liner	1
Left Floor Liner	1
Right Floor Liner	1
Top Liner	1
Liner Bracket	1
#10 X 1/2" Screw	3

TOOLS NEEDED: Phillips Screwdriver

INSTALL FLOOR LINERS

1. Remove barrier screen and glass door. (See the insert owner's manual for instructions.)
2. Place the right and left floor liners as shown in Figure 1.

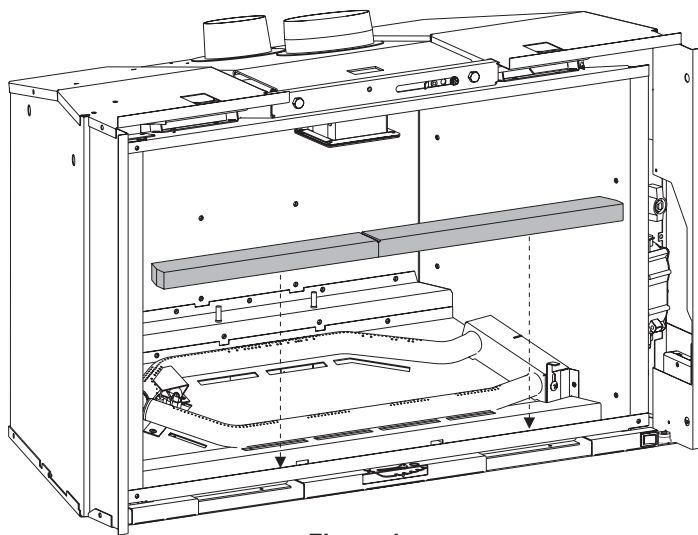


Figure 1

INSTALL REAR LINER

1. Place rear liner on the back of the firebox and hold with one hand. See Figure 2.

NOTICE: For Cottage Brick Liner, install protruding bricks towards the top. For Traditional Stone Liner, install thicker rocks towards the top.

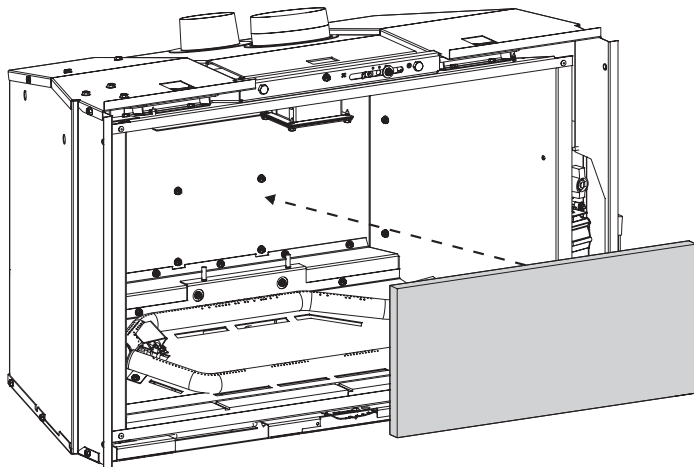


Figure 2

INSTALL SIDE LINERS

1. Place right and left liners against right and left firebox wall, then push back to rear liner to hold into place. See Figure 3.


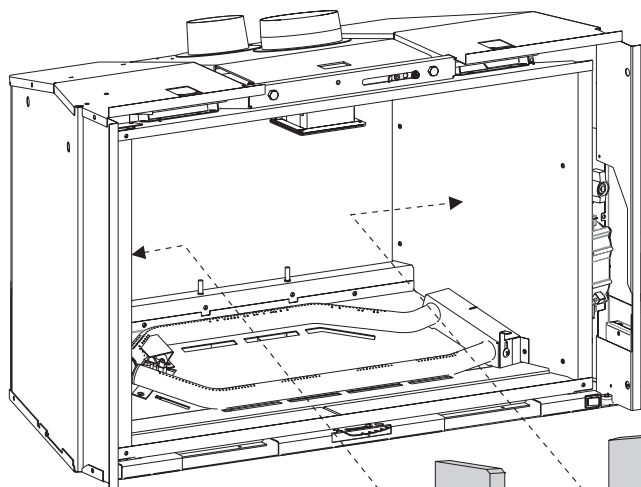


Figure 3

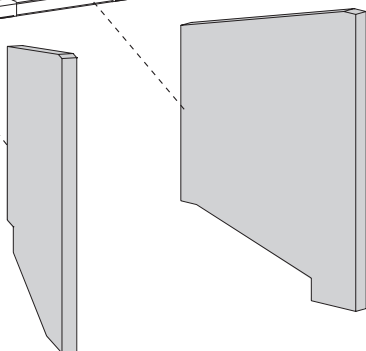


INSTALL TOP LINERS AND LINER BRACKETS

1. Place the top liner so the back edge rests atop the rear liner. Secure liner bracket with (3) screws. See steps 1 and 2 in Figure 4.

NOTICE: Painted side faces down. Black side faces up.

STEP 1
HOLD TOP
LINER IN PLACE

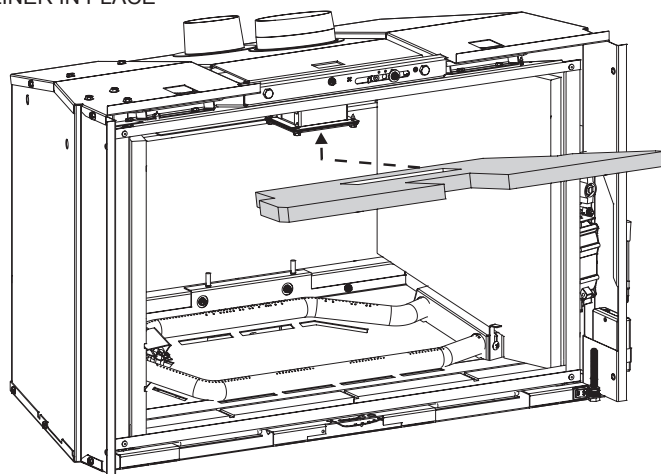

STEP 2
INSTALL LINER
BRACKET WITH
3 SCREWS


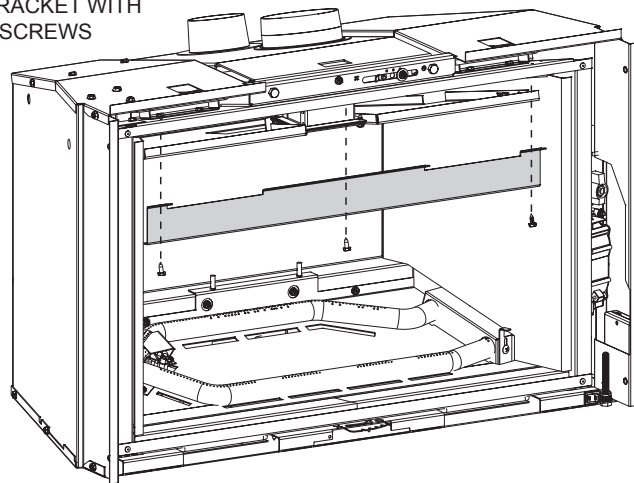


Figure 4

CERAMIC FIBER LINER KIT EXPLODED VIEW AND PARTS LIST



INDEX NUMBER	PART NUMBERS				DESCRIPTION	QUANTITY SUPPLIED
	DVP30CPTB	DVP30CPTS	DVP35CPTB	DVP35CPTS		
1	Order Kit	Order Kit	Order Kit	Order Kit	Left Floor Liner	1
2	Order Kit	Order Kit	Order Kit	Order Kit	Right Floor Liner	1
3	Order Kit	Order Kit	Order Kit	Order Kit	Rear Liner	1
4	Order Kit	Order Kit	Order Kit	Order Kit	Left Liner	1
5	Order Kit	Order Kit	Order Kit	Order Kit	Right Liner	1
6	Order Kit	Order Kit	Order Kit	Order Kit	Top Liner	1
7	38025	38025	38486	38486	Liner Bracket	1
NS	R2737	R2737	R2737	R2737	Hex Head #10 X 1/2" Screw	3

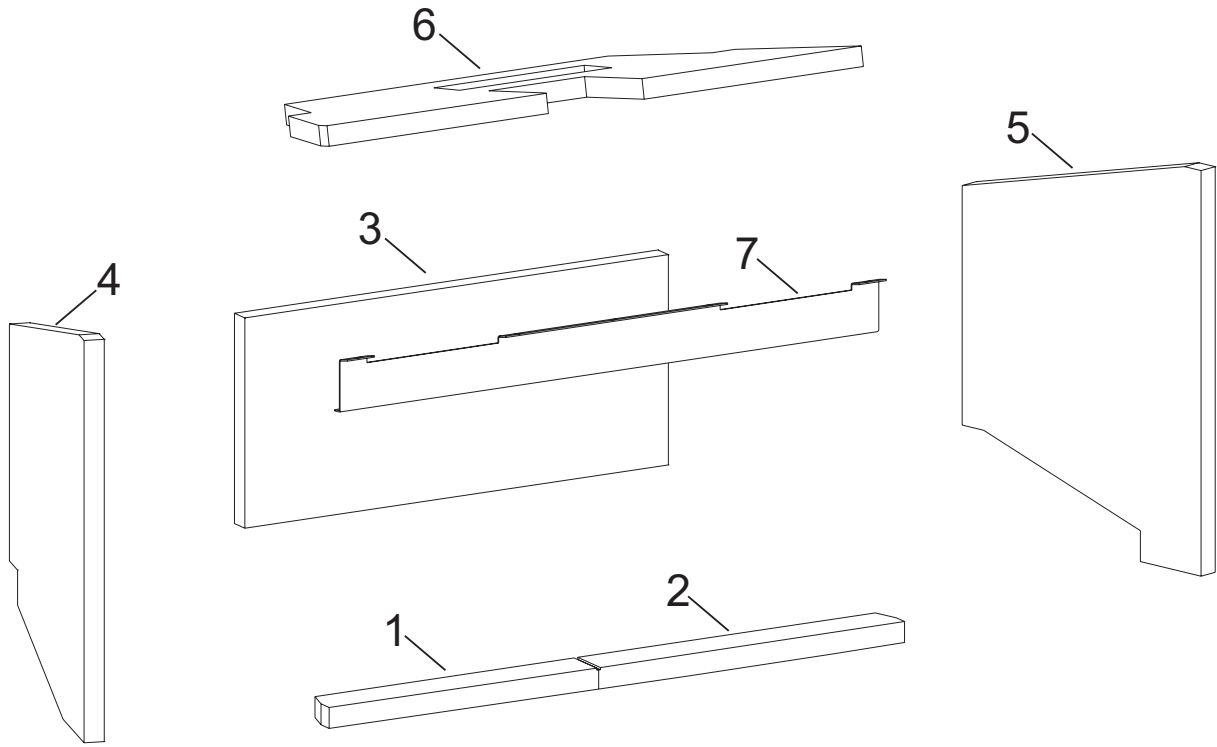

SINCE 1932

Empire Comfort Systems Inc.
Belleville, IL

If you have a general question
about our products, please e-mail
us at info@empirecomfort.com.

If you have a service or repair
question, please contact your dealer.

www.empirecomfort.com



AMERICAN HEARTH

INSTRUCTION D'INSTALLATION POUR TROUSSES DE GARNITURES DVCT30 ET DVCT35



GARNITURES EN FIBRE DE CÉRAMIQUE		
DVCT30	DVCT35	Description
DVP30CPTB-1	DVP35CPTB-1	Brique cottage anglais
DVP30CPTS-1	DVP35CPTS-1	Pierre des champs

LAISSER LE FEUILLET D'INSTRUCTION AU PROPRIÉTAIRE.

CONTENU DE L'EMBALLAGE	
Description	Garnitures en fibre de céramique
Garniture arrière	1
Garniture gauche	1
Garniture droite	1
Garniture du fond gauche	1
Garniture du fond droit	1
Garniture du plafond	1
Support de garniture	1
Vis n° 10 X 1/2 po	3

OUTILS REQUIS : Tournevis Phillips

POSE DES GARNITURES DU FOND

1. Retirer l'écran de protection et la porte vitrée. **(Pour la procédure, voir le manuel du propriétaire).**
2. Poser les garnitures du fond gauche et droit comme montré à la **Figure 1**.

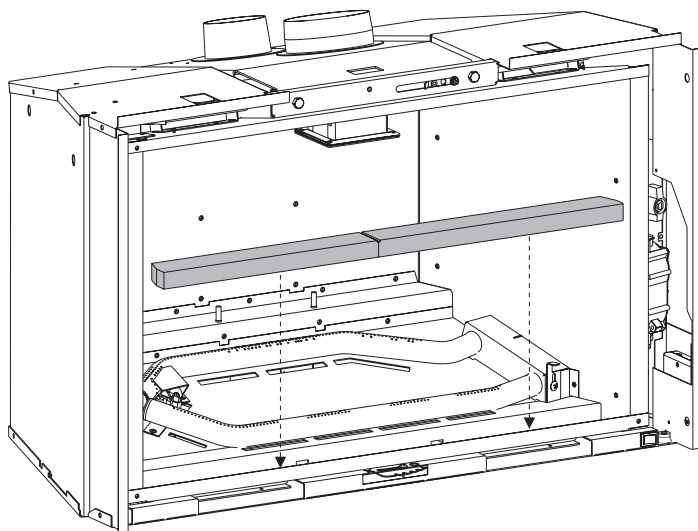


Figure 1

POSE DE LA GARNITURE ARRIÈRE

1. Placer la garniture arrière sur le mur du fond de l'âtre en la retenant d'une main. **Voir Figure 2.**

AVIS : Pour la garniture de brique cottage anglais, placer les briques en saillie sur la partie supérieure. Pour la garniture de pierre des champs, placer les pierres plus épaisses sur la partie supérieure.

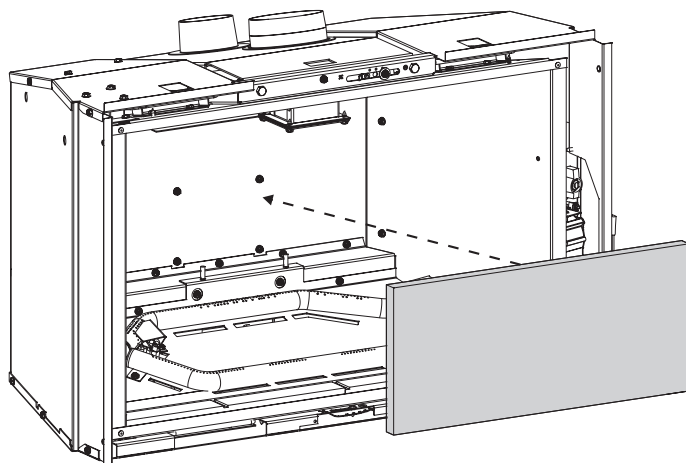


Figure 2

POSE DES GARNITURES LATÉRALES

1. Placer les garnitures gauche et droite contre les parois de l'âtre et les pousser sur la garniture arrière. **Voir Figure 3.**

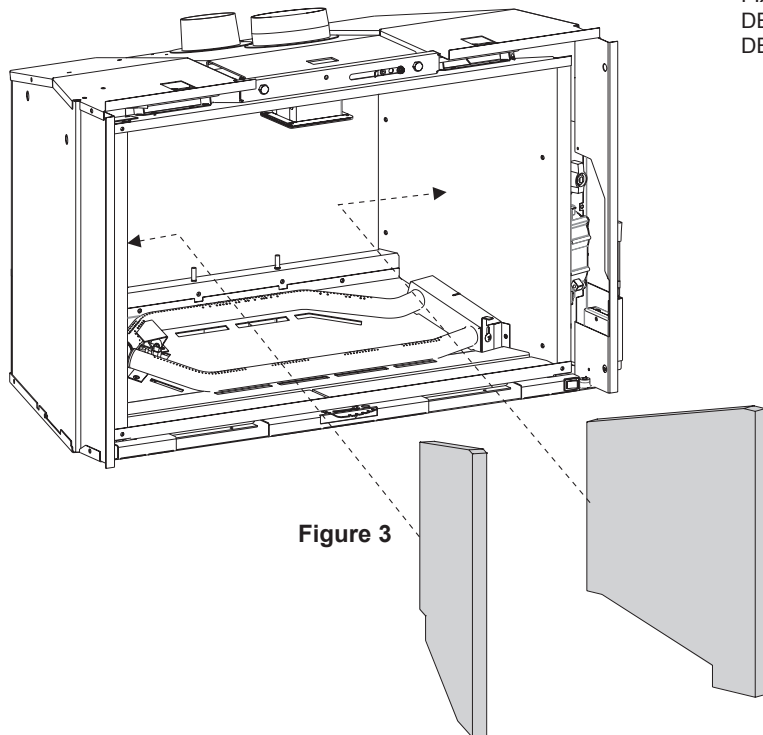



Figure 3

POSE DE LA GARNITURE DU PLAFOND ET DU SUPPORT DE GARNITURES

1. Placer la garniture du plafond de sorte que sa bordure arrière repose sur le dessus de la garniture arrière et la fixer sur la paroi du plafond de l'âtre à l'aide du support de garnitures retenu avec trois (3) vis. **Voir les étapes 1 et 2 de la Figure 4.**

AVIS : Placer la face décorative vers le bas et la face noire vers le haut.

ÉTAPE 1 TENIR LA GARNITURE DU PLAFOND EN PLACE

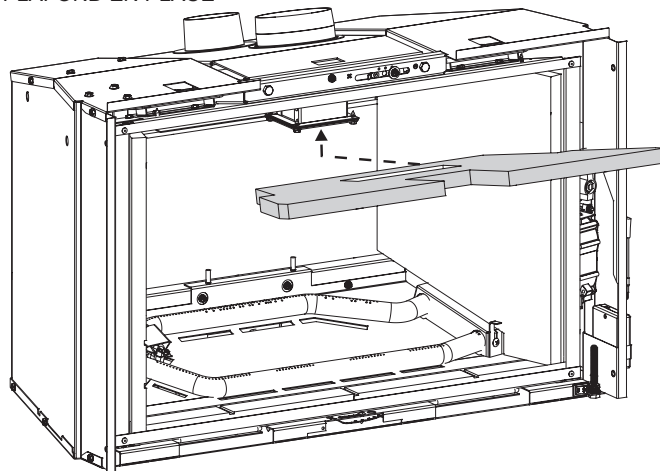

ÉTAPE 2 FIXER LE SUPPORT DE GARNITURE À L'AIDE DE 3 VIS


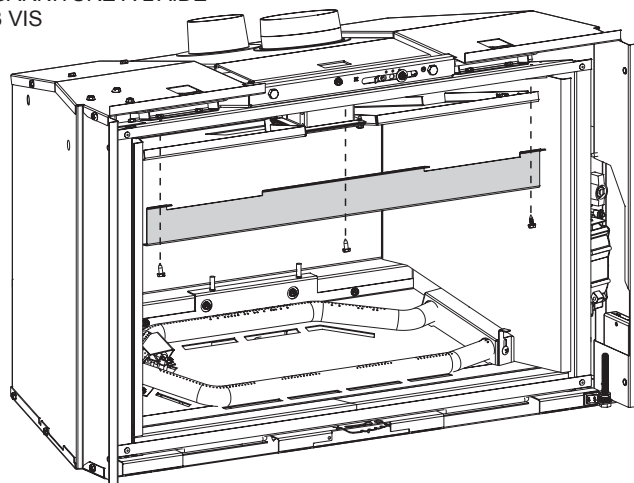


Figure 4

VUE ÉCLATÉE ET LISTE DE PIÈCES DE LA TROUSSE DE GARNITURES DE FIBRE DE CÉRAMIQUE



NUMÉRO DE REPÈRE	NUMÉRO DE PIÈCE				DESCRIPTION	QUANTITÉ FOURNIE
	DVP30CPTB	DVP30CPTS	DVP35CPTB	DVP35CPTS		
1	Commander la trousse	Commander la trousse	Commander la trousse	Commander la trousse	Garniture du fond gauche	1
2	Commander la trousse	Commander la trousse	Commander la trousse	Commander la trousse	Garniture du fond droit	1
3	Commander la trousse	Commander la trousse	Commander la trousse	Commander la trousse	Garniture arrière	1
4	Commander la trousse	Commander la trousse	Commander la trousse	Commander la trousse	Garniture gauche	1
5	Commander la trousse	Commander la trousse	Commander la trousse	Commander la trousse	Garniture droite	1
6	Commander la trousse	Commander la trousse	Commander la trousse	Commander la trousse	Garniture du plafond	1
7	38025	38025	38486	38486	Support de garniture	1
N.M.	R2737	R2737	R2737	R2737	Vis à tête hex. n° 10 X 1/2 po	3

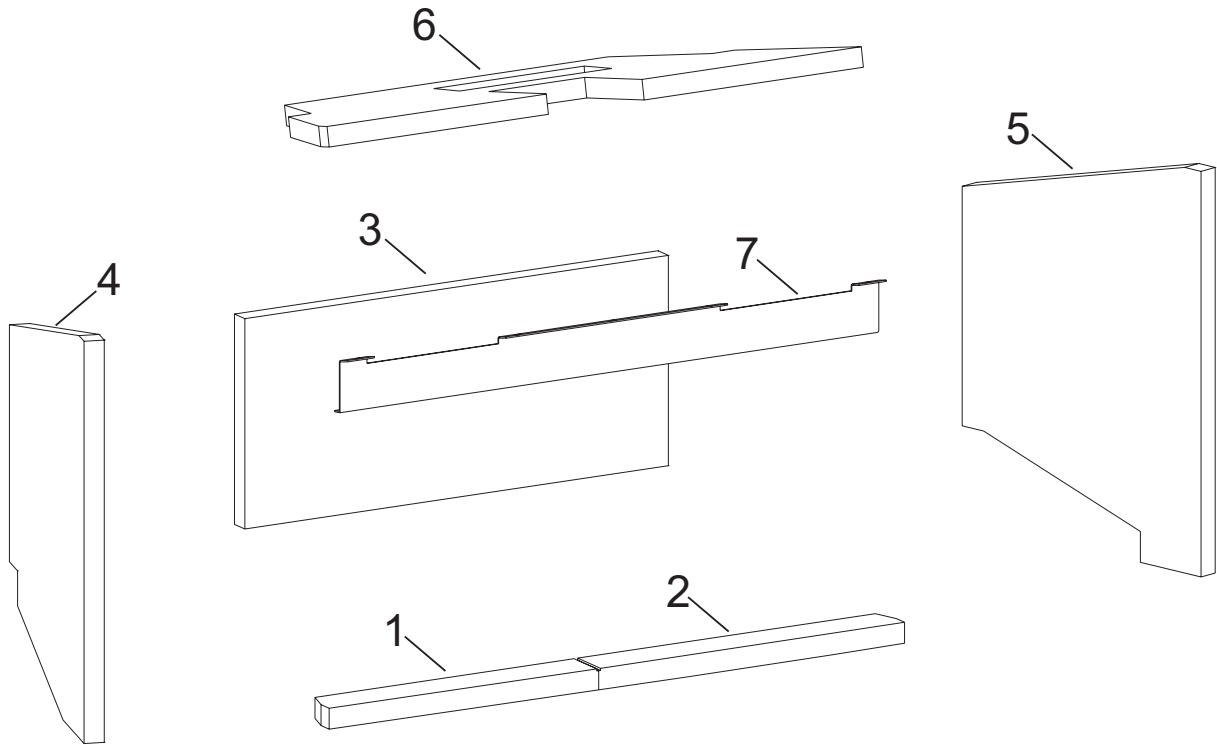

SINCE 1932

Empire Comfort Systems Inc.
Belleville, IL

Pour toute question générale concernant nos produits, veuillez nous envoyer un courriel à info@empirecomfort.com.

Pour toute question d'entretien ou de réparation, veuillez contacter votre concessionnaire.

www.empirecomfort.com